



rockGEAR™ — RS66168B

Rancho Rear Adjustable Track Bar
Fits 2021-2020 Jeep Gladiator JT

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION


⚠ WARNING: Carefully read, understand and follow the instructions provided in this manual, and keep it in a safe place for future reference. If you have any doubt whatsoever regarding the installation or maintenance of your Rancho suspension system, please see your retailer for assistance or advice. Failure to follow the warnings and instructions provided herein can result in the failure of the suspension system, or can cause you to lose control of your vehicle, resulting in an accident, severe personal injury or death.

These instructions should remain in the vehicle glove box for future reference.

Parts List

P/N	DESCRIPTION	QTY.
RS881043B	Rear Adjustable Track Bar- JT	1
RS89168	Instructions	1

Adjustable Length: 33.6" — 34.9"

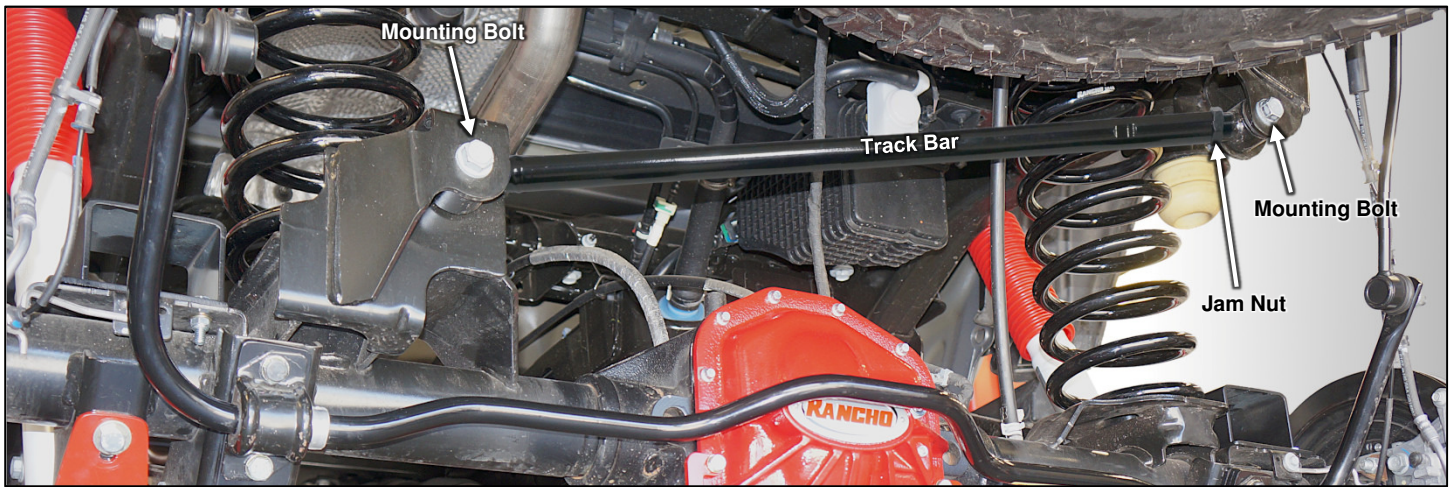

1) Park vehicle on a level surface. Set the parking brake and chock wheels.

2) Measure the axle center by measuring the distance from the outside face of the tire to fender edge. Use a plumb-bob or straight edge for reference. Record the measurements below:

Driver Side _____ Passenger Side _____

- 3) Remove the track bar to frame bracket nut and bolt.
- 4) Remove the track bar to axle bracket flag nut and bolt. Do not use impact wrench if flag nut is installed.
- 5) Remove track bar.
- 6) Adjust length of new Rancho track bar using old track bar and measurements from step 2 as guide.

If axle is shifted to the passenger side of vehicle adjust track bar longer than old track bar.

If axle is shifted to the driver side of vehicle adjust track bar shorter than old track bar.

Adjust bar half the amount that axle is shifted.

CAUTION: Do not adjust longer than 34.9" with no more than 1.1" exposed threads on rod end.

- 7) Attach adjustable end of track bar to frame bracket using OE hardware.
 - 8) Attach non-adjustable end of track bar to axle bracket using OE hardware.
- If holes do not line up, have an assistant push on the vehicle to align holes.
- 9) Torque upper and lower mounting hardware to 100 lb-ft.
 - 10) Torque jam nut to 150 lb-ft.

IMPORTANT: Re-torque mounting hardware and jam nut after first 100 miles, and every time vehicle is driven off-road.



Rancho Technical Department 1-800-325-8886.